

Select your Flymoon opening direction, according to the drawings below.
The direction follows the movement of the shelves from the user's point of view.

